

Tekna User Guide



• Ringtone Volume Adjustment

• Power On/Off

• Turn Off " Manual Viewing Mode"

• Not Used

• Manual Viewing Mode
In standby mode, Press Hold key for 3 seconds to bring up the doorstation camera manually

Contrast

• Door Release Button
Press during communication with doorstation to open door

• Brightness

* Please note : If Red LED next to power button is off, the monitor will not function.

